


Cuisinart®

Half Circle Wall Cookware Rack Model CRHC-22

Beautifully display Cuisinart® Cookware and keep it within easy reach. This Cuisinart® Cookware Rack eliminates the need to bend down to stack and store cookware in cupboards. The pot rack is easy to install and is designed to last a lifetime.

WARNING:
PLEASE READ ALL INSTRUCTIONS
BEFORE ASSEMBLING AND INSTALLING
YOUR NEW COOKWARE RACK

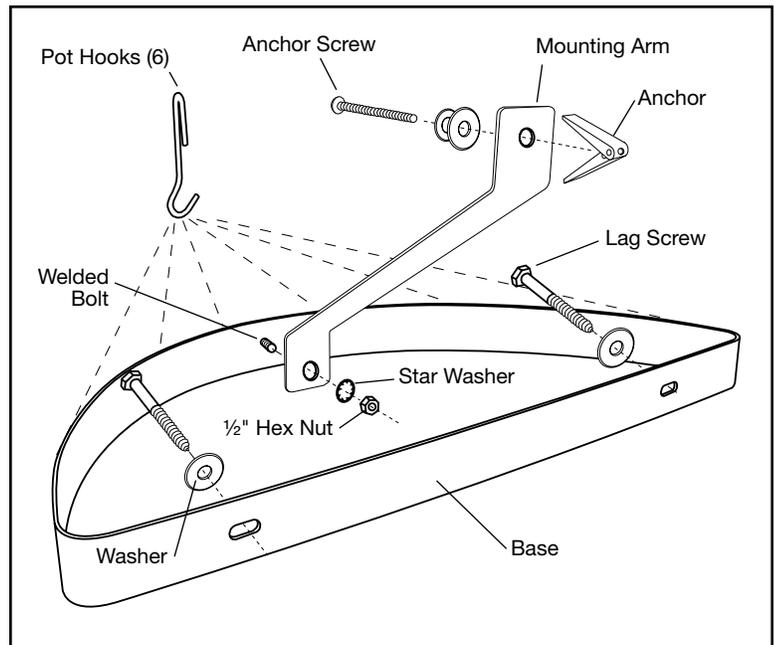

Rack Size: 25" Length x 12" Width x 15½" Height

Enclosed you will find everything needed for the proper assembly and use of your cookware rack. The parts and hardware included are:

- | | | |
|-------------------------|------------------------------------|--------------------------|
| 1 Wall Half Circle Base | 1 Star Washer | 1 Sheetrock Anchor |
| 1 Mounting Arm | 3 2½" Long Lag Screws | 1 Sheetrock Anchor Screw |
| 6 Angled Pot Hooks | 3 Lag Screw Washers | |
| 1 ½" Hex Nut | 1 Sheetrock Anchor Washer (toggle) | |

ASSEMBLY and INSTALLATION INSTRUCTIONS

Note: Please proceed carefully, using the following instructions to assure this rack is assembled properly for safe installation and use and without damage to the finish. Haste in assembly or installation could result in needless scratching or marring of the finish.

ASSEMBLY

1. Unwrap rack and mounting arm from plastic covering.
2. Attach the arm to the rack body, using the lock Star washer and ½" hex nut. Tighten securely.

INSTALLATION

1. Remove mounting hardware from plastic bag and check against parts list above.
2. Identify mounting location and insure at least the two base mounting holes are located directly over wall studs (wood studs). See Illustration above.
3. Position rack assembly in desired location and mark fastening locations for base and mounting arm using rack holes provided.
4. Drill mounting holes and mount rack for your scenario.
 - a. All wood installation
 - i. Drill three holes as marked using a 7/32" drill bit (not provided).
 - ii. Hold rack in position (you may want assistance during this step) and fasten base to wall first using the 2½" lag screws and washers provided. Tighten securely.
 - iii. Finish by securing the mounting arm with the third 2½" lag screw and washer, tighten securely.
 - b. For wood and sheetrock installation
 - i. Again insure base mounting holes are located over wood wall studs.

OVER, PLEASE

- ii. Drill base mounting holes as marked using a $\frac{7}{32}$ " drill bit (not provided).
 - iii. Drill mounting arm hole as marked using a $\frac{3}{8}$ " drill bit through sheetrock.
 - iv. Insert small washer on screw first, then larger washer second. Pass through bracket mounting hole and attach anchor to screw.
 - v. Hold rack in position (you may want assistance during this step) and fasten base to wall first using the $\frac{1}{2}$ " lag screws and washers provided.
 - vi. Finish by securing the mounting arm with the provided sheetrock anchor. Push toggle through sheetrock and tighten screw securely.
5. Your rack is now ready for use. Hang the angled pot hooks on the rack and distribute the weight of your 6 pieces of cookware evenly around the rack.
 6. The care and cleaning of our cookware racks must be done with a low abrasive cleaner. A periodic cleaning will restore your rack to its original brilliance.

Note: The lag screws for the base must go into solid wood of wall studs or into a wooden wall. The mounting arm must be secured with the lag screw for wood or the anchor/screw for sheetrock based on your situation. To install otherwise is improper. Your local hardware store can advise you if special hardware is needed for your particular situation.

WARNING It is important that your cookware rack be assembled and installed according to the above directions. If the unit is assembled and or installed incorrectly, it could become unstable, collapse and possibly cause injury. Cuisinart is not responsible for any damages due to improper assembly or installation.

LIFETIME WARRANTY

Your Cuisinart® Cookware Rack is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime. If your Cookware Rack should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190, or write to Consumer Service Center, Cuisinart, 150 Milford Road, East Windsor, NJ 08520. To facilitate the speed and accuracy of your return, please also enclose \$7.00 for shipping and handling of the product. Be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by check or money order. This warranty excludes damage caused by accident, misuse or abuse and improper installation. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions. California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its choice, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Customer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.