

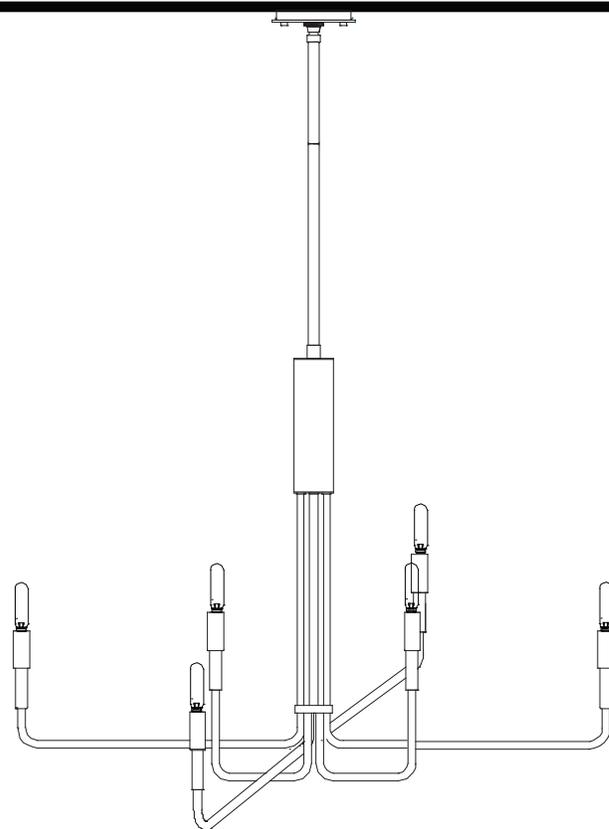




This page lists the contents included in the box. Please take time to identify the hardware as well as the individual components of the product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Please follow the assembly instructions closely. Improper assembly can result in personal or property damage.

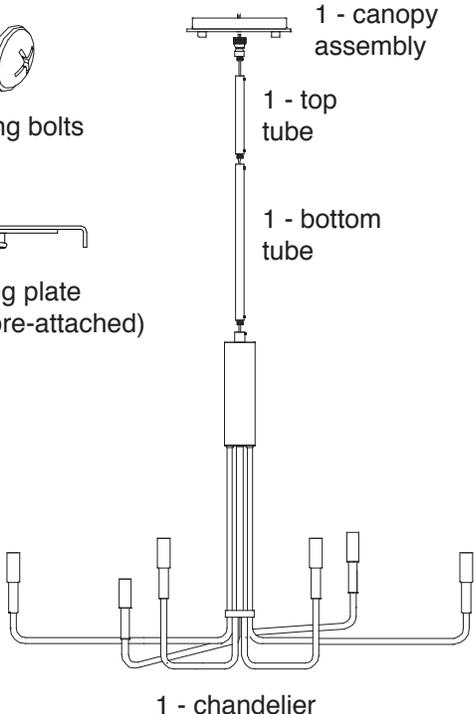

NOTE: We recommend that this fixture be installed by a licensed electrician. If you are unsure about what mounting method you should use, consult a qualified professional or your local hardware store.

| | |
|--|---|
|  <p>phillips head screwdriver (not included)</p>  <p>flat head screwdriver</p>  <p>allen wrench (included)</p>  <p>electrical tape</p> |  <p>2 - wire nuts</p>  <p>2 - mounting bolts</p>  <p>1 - socket ring</p>  <p>1 - mounting plate (ground screw pre-attached)</p>  <p>6 - 40 watt max type T bulb (NOT INCLUDED)</p>  <p>1 - canopy assembly 1 - top tube 1 - bottom tube 1 - chandelier</p> |
|--|---|

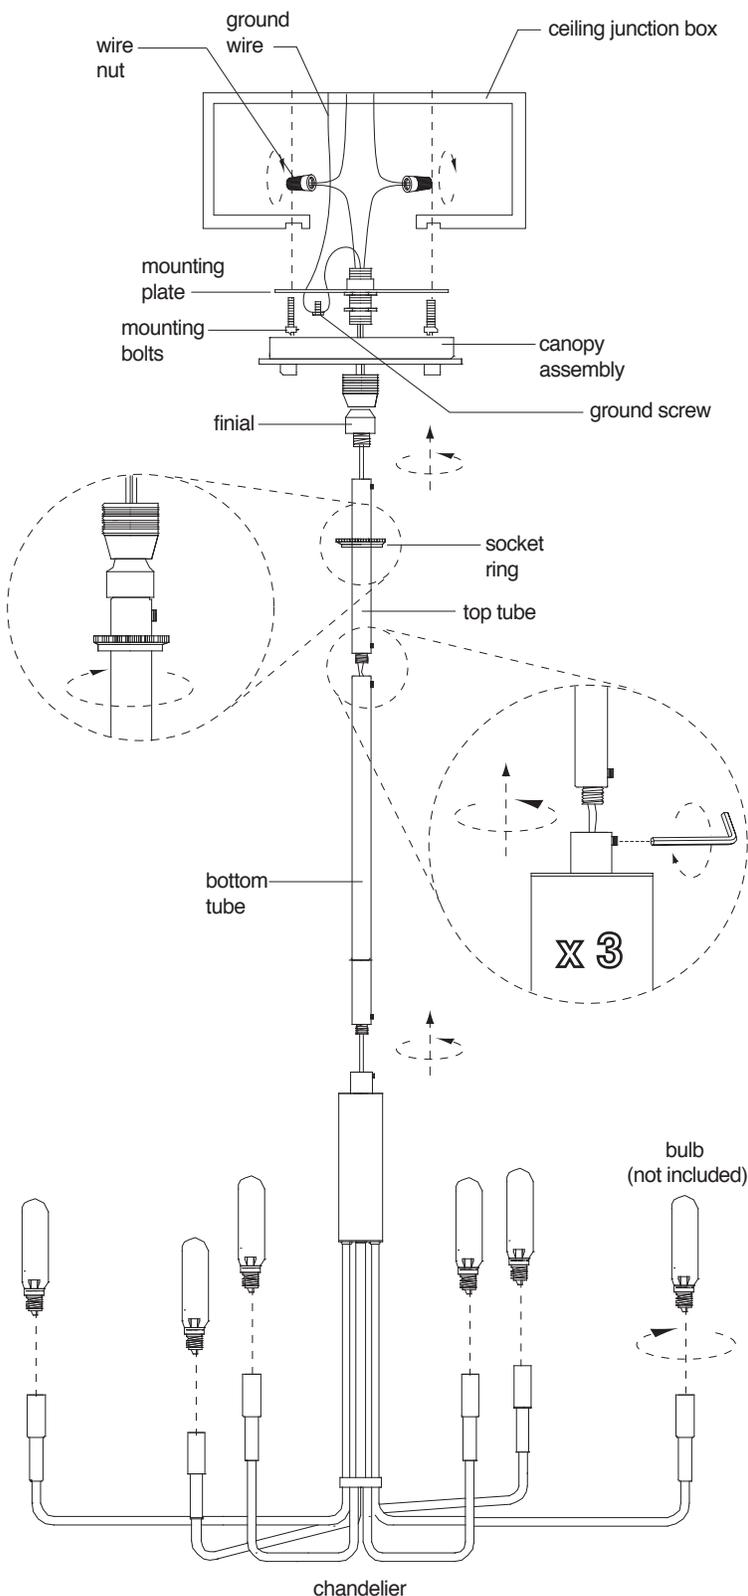

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
- 3) Assemble **top tube**, **bottom tube** and **chandelier** as shown. Securely fasten each component together with an **allen wrench**.
- 4) Place the **mounting plate** over the center of the ceiling junction box.
- 5) Align holes in mounting plate with holes in junction box and attach with 2 **mounting bolts**. Secure bolts with a **phillips head screwdriver**.
- 6) Gently pull wiring down from ceiling junction box and allow it to hang
- 7) Carefully inspect the pendant's fixture wires:
 - *Neutral fixture wire* = white
 - *Hot fixture wire* = black
 - *Ground wire* = bare copper, green
- 8) Wrap the *long ground wire* around *green screw* of **mounting plate** 2 times, leaving approximately 6" exposed. At this point, tighten the *green screw* with a **flat head screwdriver**.
- 9) Attach the *long ground wire* (bare Copper) this is wrapped around the green screw and the *short ground wire* (green) this is attached to the canopy to the *ground junction box wire* from the outlet (usually green or bare wire). Fasten all 3 wires together with a **large wire nut** and wrap the connection with electrical tape. Be sure no strands are exposed.
- 10) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **small wire nut** and wrap the connection with electrical tape.
- 11) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 12) Gently tuck the wire connections neatly into the ceiling junction box.
- 13) Push **canopy assembly** up over the **mounting plate** until it is flush with the ceiling. Turn **finial** clockwise to secure.
- 14) Secure chandelier assembly to canopy assembly with **socket ring**.
- 15) Insert 6 - **bulbs** (not included) into corresponding socket. **DO NOT EXCEED SPECIFIED WATTAGE.**
- 16) Restore power to junction box and test fixture. Installation is now complete.