



This page lists the contents included in the box. Please take time to identify the hardware as well as the individual components of the product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Please follow the assembly instructions closely. Improper assembly can result in personal or property damage.

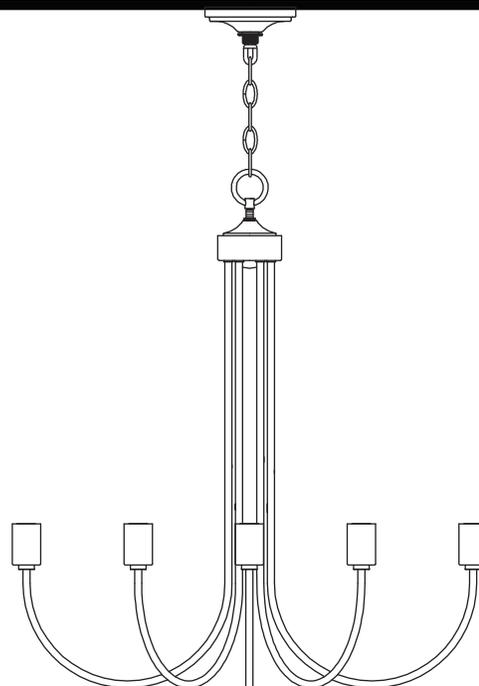


NOTE: We recommend that this fixture be installed by a licensed electrician. If you are unsure about what mounting method you should use, consult a qualified professional or your local hardware store.

CLEANING & CARE

Do not use polishes or cleaners on your lamp.
Dust surfaces with a dry soft cloth.

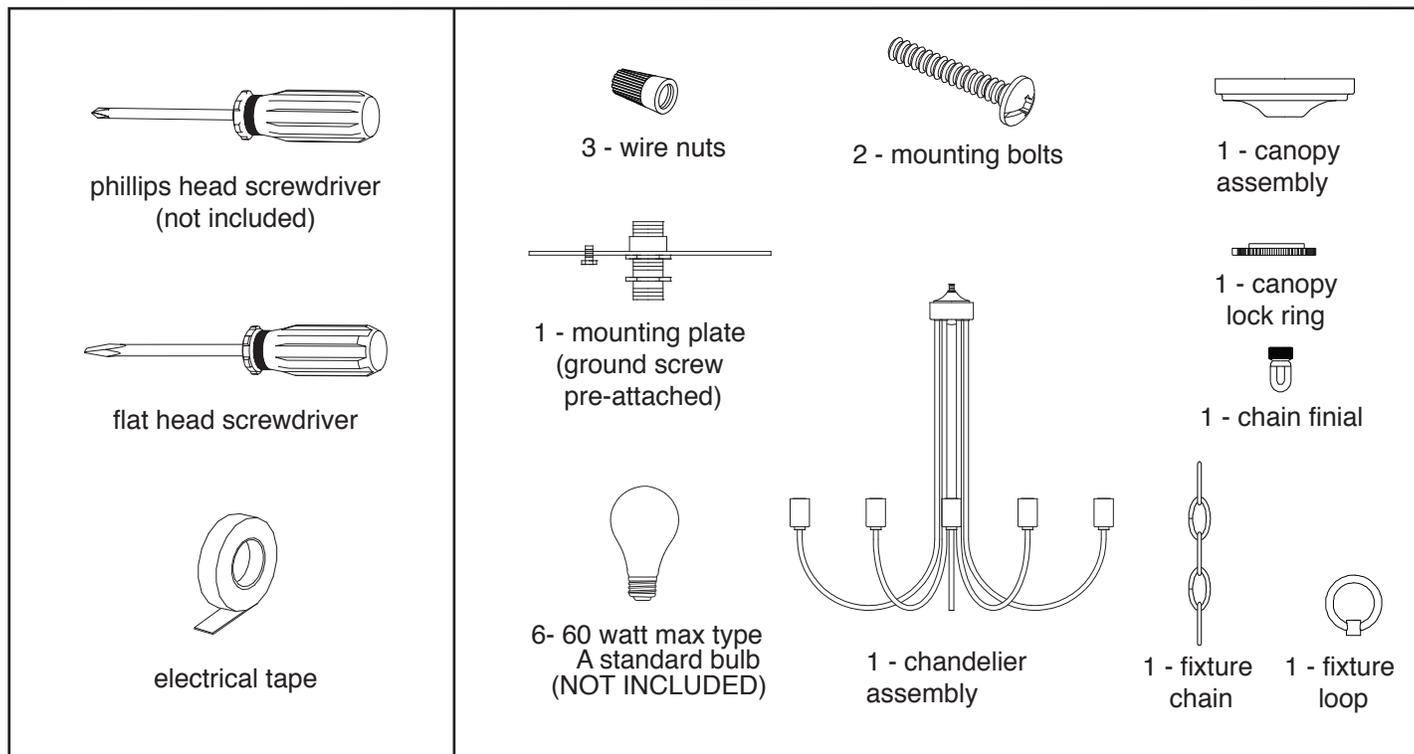

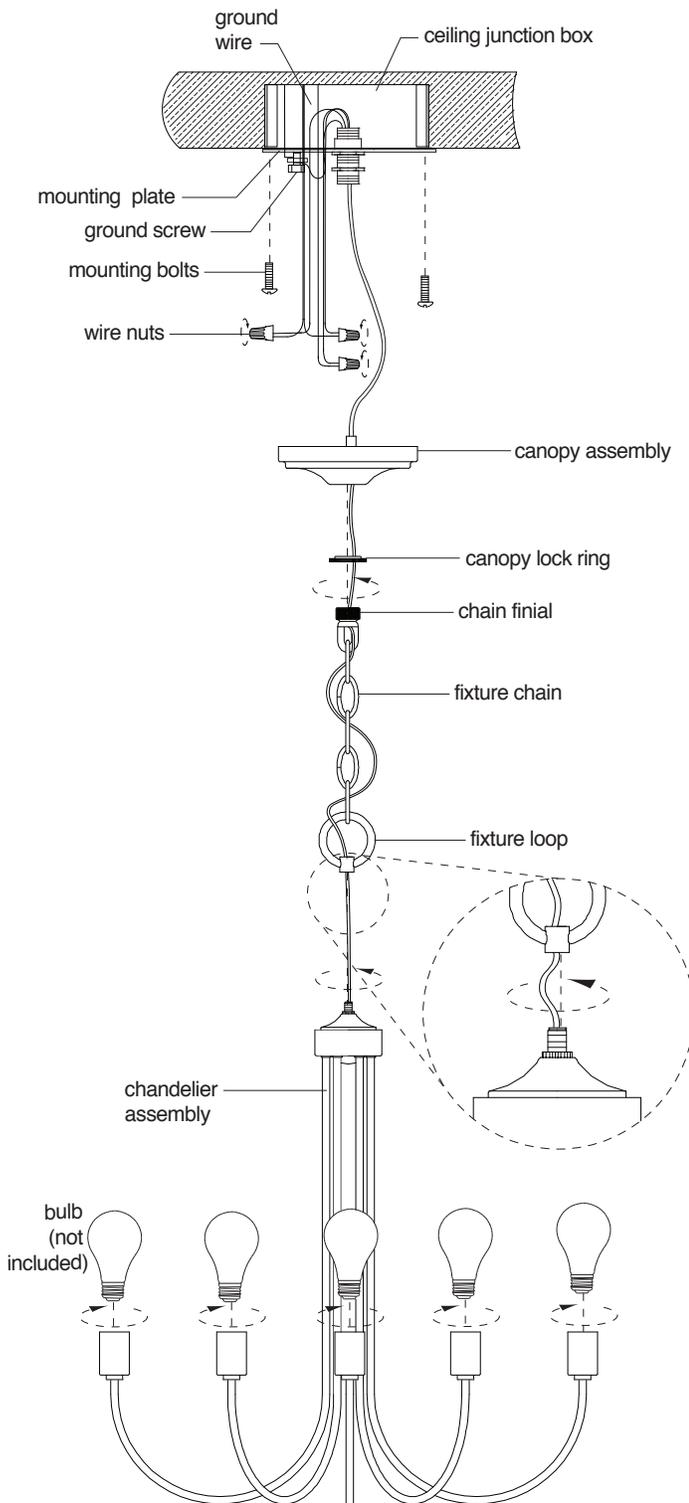

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
- 4) Unfold arms of **chandelier assembly**. Attach **chandelier assembly** to **fixture loop** by turning chandelier assembly counter clockwise as shown.
- 5) Secure **canopy assembly** by attaching **canopy lock ring** and **chain finial** to threaded end of **mounting plate assembly**. Turn chain finial counter clockwise as shown.
- 6) Align holes in mounting plate with holes in junction box and attach with 2 **mounting bolts**. Secure bolts with a **Phillips head screwdriver**.
- 7) Gently pull wiring down from ceiling junction box and allow it to hang.
- 8) Adjust **fixture chain** to desired length. Remove links as necessary. Attach **fixture chain** to **chain finial** and **fixture loop**.
- 9) Unscrew **canopy lock ring** and pull the fixture wires and ground wire up through the fixture chain, alternating links.
- 10) Carefully inspect the pendant's fixture wires:
 - *Neutral fixture wire* = white wire
 - *Hot fixture wire* = black wire
 - *Ground wire* = green wire
- 11) Wrap *ground wire* of lamp assembly and *ground wire* of junction box around *ground screw* of mounting plate. Tighten the *ground screw* with a **flat head screwdriver**.
- 12) Attach the *long ground wire* (bare Copper) this is wrapped around the green screw and the *short ground wire* (green) this is attached to the canopy to the *ground junction box wire* from the outlet (usually green or bare wire). Fasten together with a **wire nut** and wrap the connection with electrical tape. Be sure no strands are exposed.
- 13) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with **electrical tape**.
- 14) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with **electrical tape**. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 15) Gently tuck the wire connections neatly into the ceiling junction box.
- 16) Push **canopy assembly** up over the **mounting plate** until it is flush with the ceiling. Secure **canopy assembly** by tightening **canopy lock ring**.
- 17) Insert 6 - **bulbs** (not included) into corresponding sockets. **DO NOT EXCEED SPECIFIED WATTAGE.**
- 19) Restore power to junction box and test fixture. Installation is now complete.